OUTSIDE

BUTTON

"C"

KNOB

HOW TO USE "KEYLEX" 500 SURFACE MOUNT RIM LOCK.

- ENSURE PRE-ENGAGED CODE BEFORE LOCKING AND ATTACHED KEYS FOR KEY OVERRIDE TYPE.
- FOR OPERATION, JUST ROTATE THE KNOB AND THUMBTURM INSIDE FOR LOCK AND UNLOCK.

INSIDE IOITDOOR SIDE: IOI IOI IOI IOI TO LOCK TO LOCK FOR "R" FOR "L" HANDS HANDS

 ★ TO UNLOCK: (FROM OUTSIDE)


 PRESS BUTTON "C" WHICH LET ALL BUTTON READY TO BE ENTERED.
 PRESS YOUR OWN CODE CORRECTLY.
 ROTATE THE KNOB ACCORDINGLY.

 ★ TO UNLOCK: (FROM INSIDE):

 ROTATE THUMBTURN FOR THE RIM BOLT

 G ROTATE THOMBTORN FOR THE RIM BOLT TRAVEL TO LEFT AND OR RIGHT HANDS.
 FROM INSIDE THE RIM BOLT CAN BE MOVED

EASILY BY THUMBTURN ALL THE TIME.

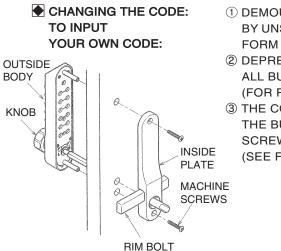

INSIDE


- ① DEMOUNT OUTSIDE MAIN BODY BY UNSCREWING 2 MACHINE SCREWS FORM INSIDE.
- ② DEPRESS BUTTON "C" TO CLEAR ALL BUTTON CODE PRE-EXISTED. (FOR READY TO NEW CODE)
- ③ THE CODE IS CHANGED BY ROTATING THE BUTTONS USING A SLOTTED SCREWDRIVER

(SEE FIG. UPPER RIGHT HANDS)

RIM-LOCK 22204


ROTATE BUTTONS PRE-EXISTED CODE TO CLEAR (NEUTRAL) POSITION 1ST.

FIG BELOW; "B 123"

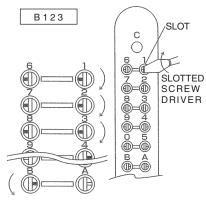

NOTE; SCREW MOUNT MAIN BODY BY FIXING SCREW TIGHTLY, SO AS NOT TO LOOSE. EACH BUTTONS IS MARKED WITH A SINGLE LINE AT RIGHT ANGLES TO THE SCREWDRIVER SLOT, AND THERE ARE CORRESPONDING MARKS ON THE BACK PLATE. WHEN A BUTTON IS ROTATED SO THAT THESE MARKS ARE ADJACENT, IT FORMS PART OF ACCESS CODE.

NOTE THAT BUTTON "C" CAN NOT BE INCLUDED IN A CODE. PLEASE SEE LEFT FIG, THE CODE IS SET "B 123"

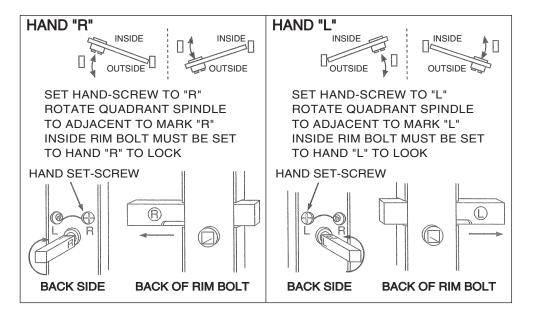

OUTSIDE